

FUEL METER

- With the ignition switch turned on, remove two lead wires going into the fuel gauge, connect the lead wires on the main wiring harness side and check the fuel meter.
- If "F" is indicated, the fuel meter is in good condition.

FUEL GAUGE SENDING UNIT

- Remove the lead wires coming out of the fuel gauge and check resistance of each of them.
- If the resistance measured is incorrect, replace the fuel gauge assembly with new one.
- The relation between position of the fuel gauge float and resistance is shown in the following table.

POSITION	RESISTANCE
FULL	1 – 5 Ω
1/2	25 – 40 Ω
EMPTY	100 – 120 Ω